



Brendon forklift point installation

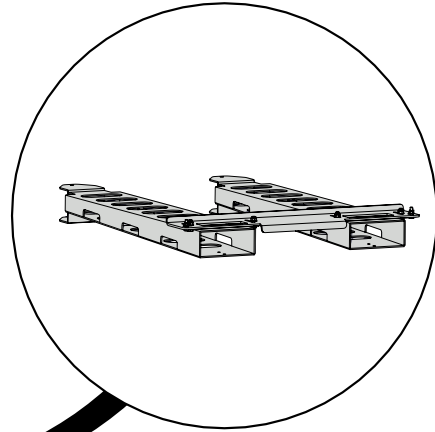

Recomended PPE

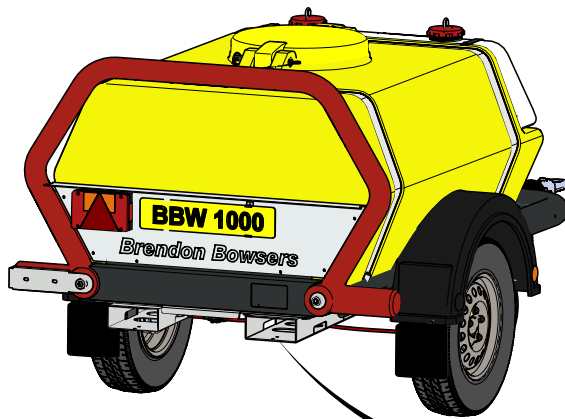

Health & Safety



READ: Instructions prior to installation.



DANGER: Crush hazard! Secure handbrake.




CAUTION: Pinch hazard! Wear gloves.



CAUTION: Forklift points are HEAVY, may require 2 people to install.


1

Ensure handbrake is secured and jockey wheel is lowered so trailer is level.

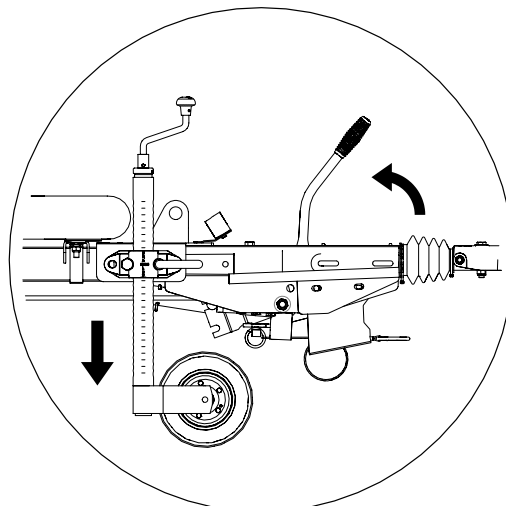

2

Remove the M8 nuts & bolts from the underside of the reversing light board.

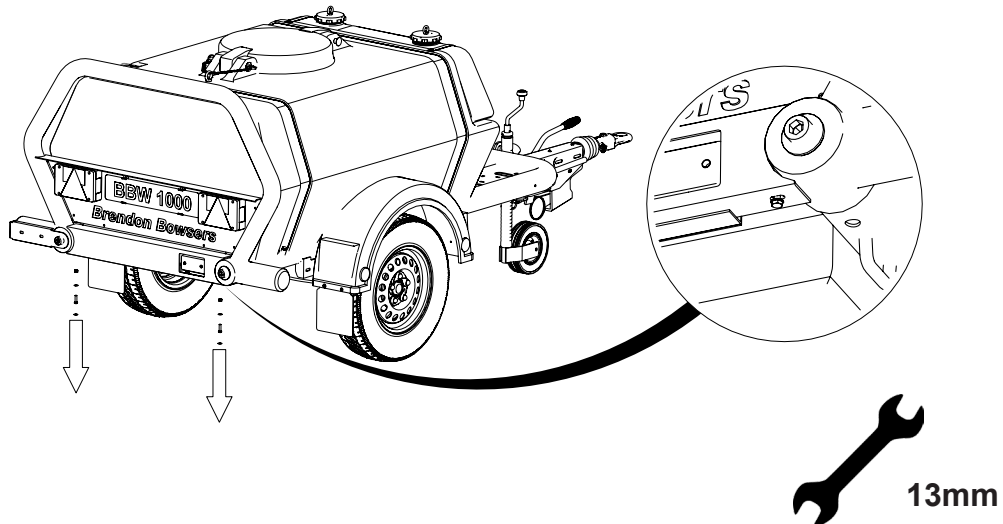


3

Replace and tighten the M8 nuts and bolts, securing the forklift point cross section to the underside of the reversing light board.

 M8 x2


 M8 x4

 M8x30
x2

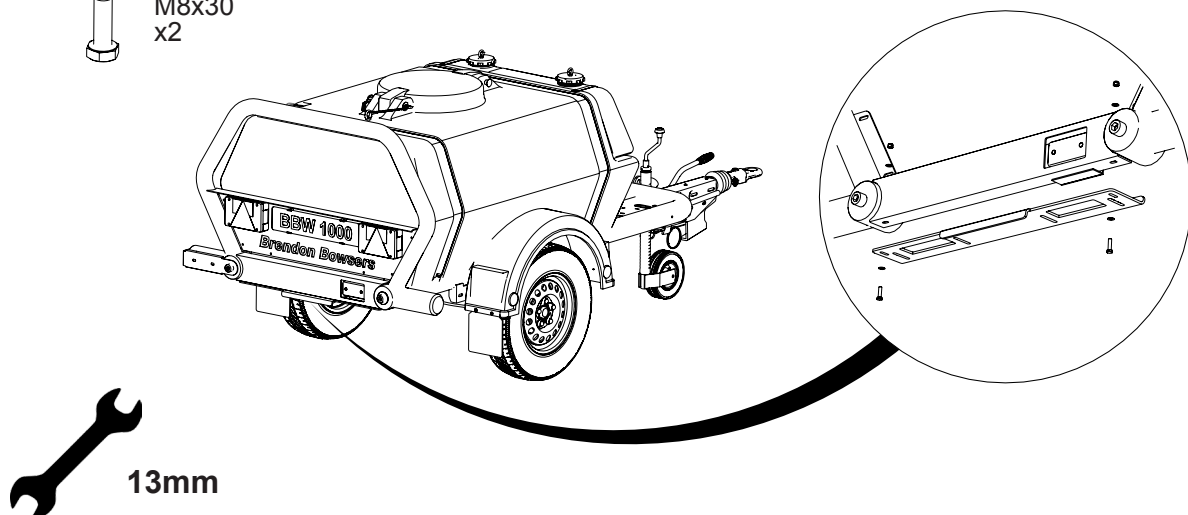

4

Guide each of the 2 forklift point ends over the axel.

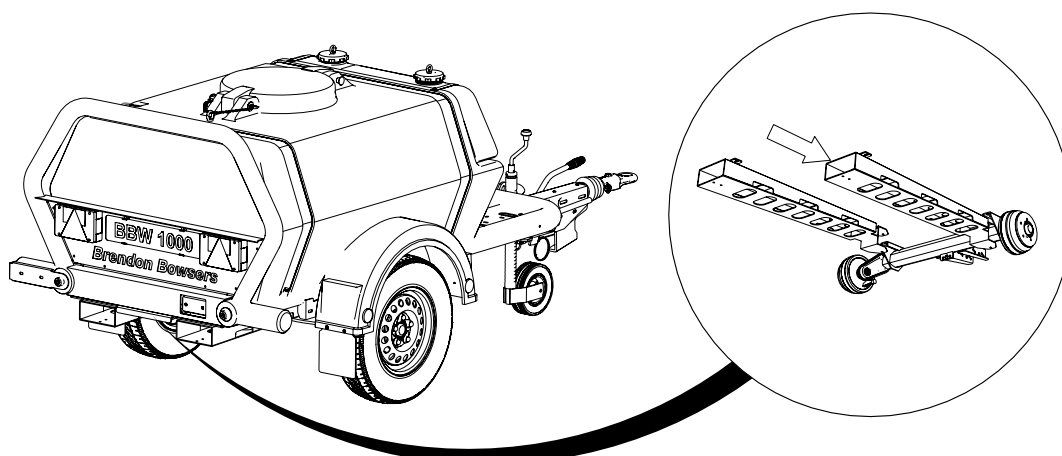


5

Secure the forklift points to the cross member using the M10 nuts & bolts.

 M10 x4

 M10 x8

 M10x30
x4

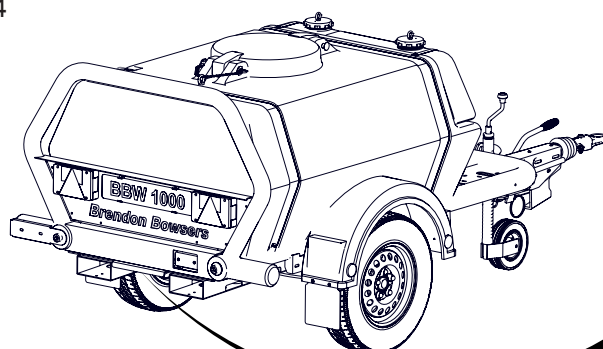

6

Align the forklift end points on the axle and secure using the M10 nuts and bolts.

