



Spray-Bar Fitting Instructions for Brendon Bowserwasher

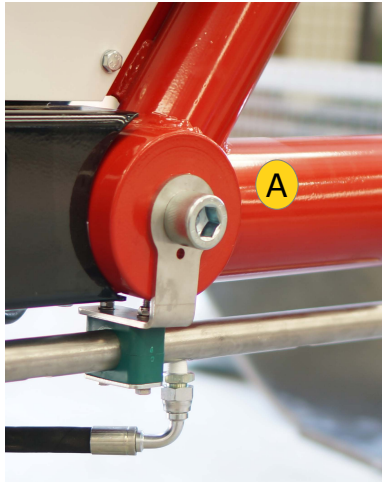


Step 1:

Fit the spray bar as shown using a 19mm Allen key (A) & 2x 8mm wrench (*Nuts and Bolts provided*)

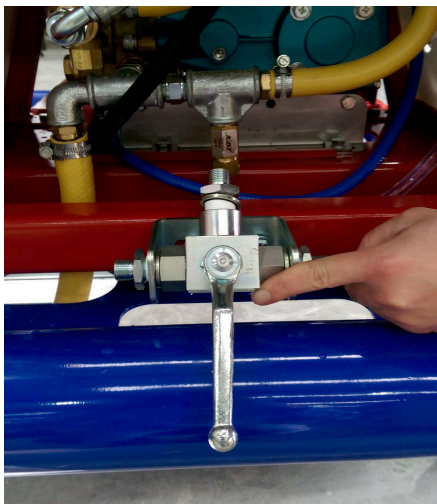


Step 2:

Mount Bracket and 2-Way Valve as Shown (*Nuts and Bolts Provided*)

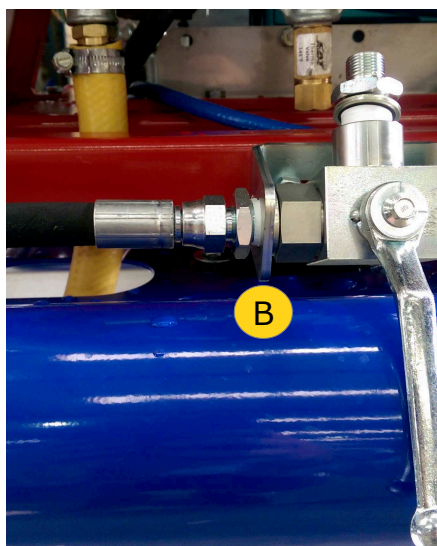

Step 3:

Connect the 2100mm hose to the fitting on the left of the 2-Way Valve (*Shown B*)

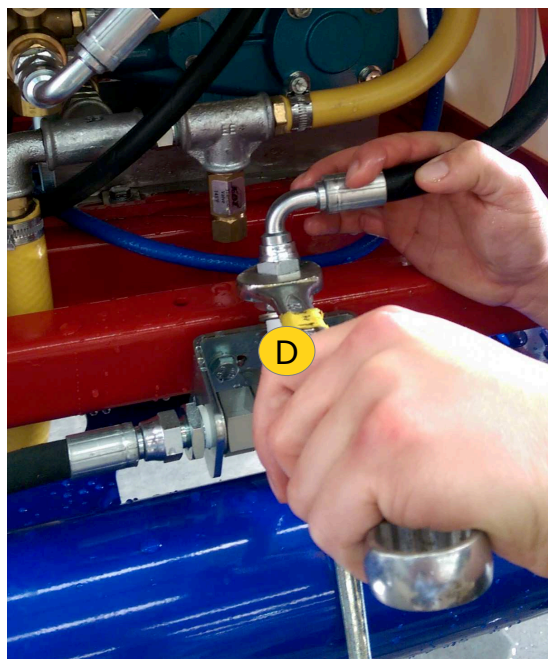

Step 4:

Disconnect the hose from the underside of the canopy hose reel
(Shown C)


Once removed, connect the hose to the top fitting on the 2-Way Valve
(Shown D)

Step 5:

Connect the short hose supplied to
Point E (Underside of the Canopy Hose Reel)
and Point F (Right hand side of the 2-Way Valve)

Finally:

Once fitted, test for leaks and tighten any fittings that are weeping or leaking

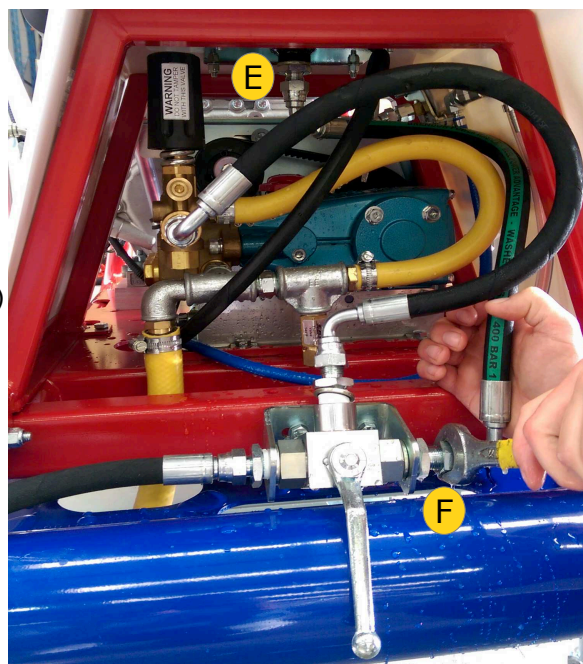

If you require any further assistance with the installation of the Brendon Spray-Bar,
please do not hesitate to contact us on: **01984 624 500**